

# Appendix A3 PROGRAM MODE


VERSION: REV. 1.0

# DC2DC+ ePOWER charger

Charger configuration is a simple step by step process as shown below.

For Tech Support call Enerdrive on **1300 851 535**

**NOTE:** The current setting below is based on the EN3DC40+ battery charger.

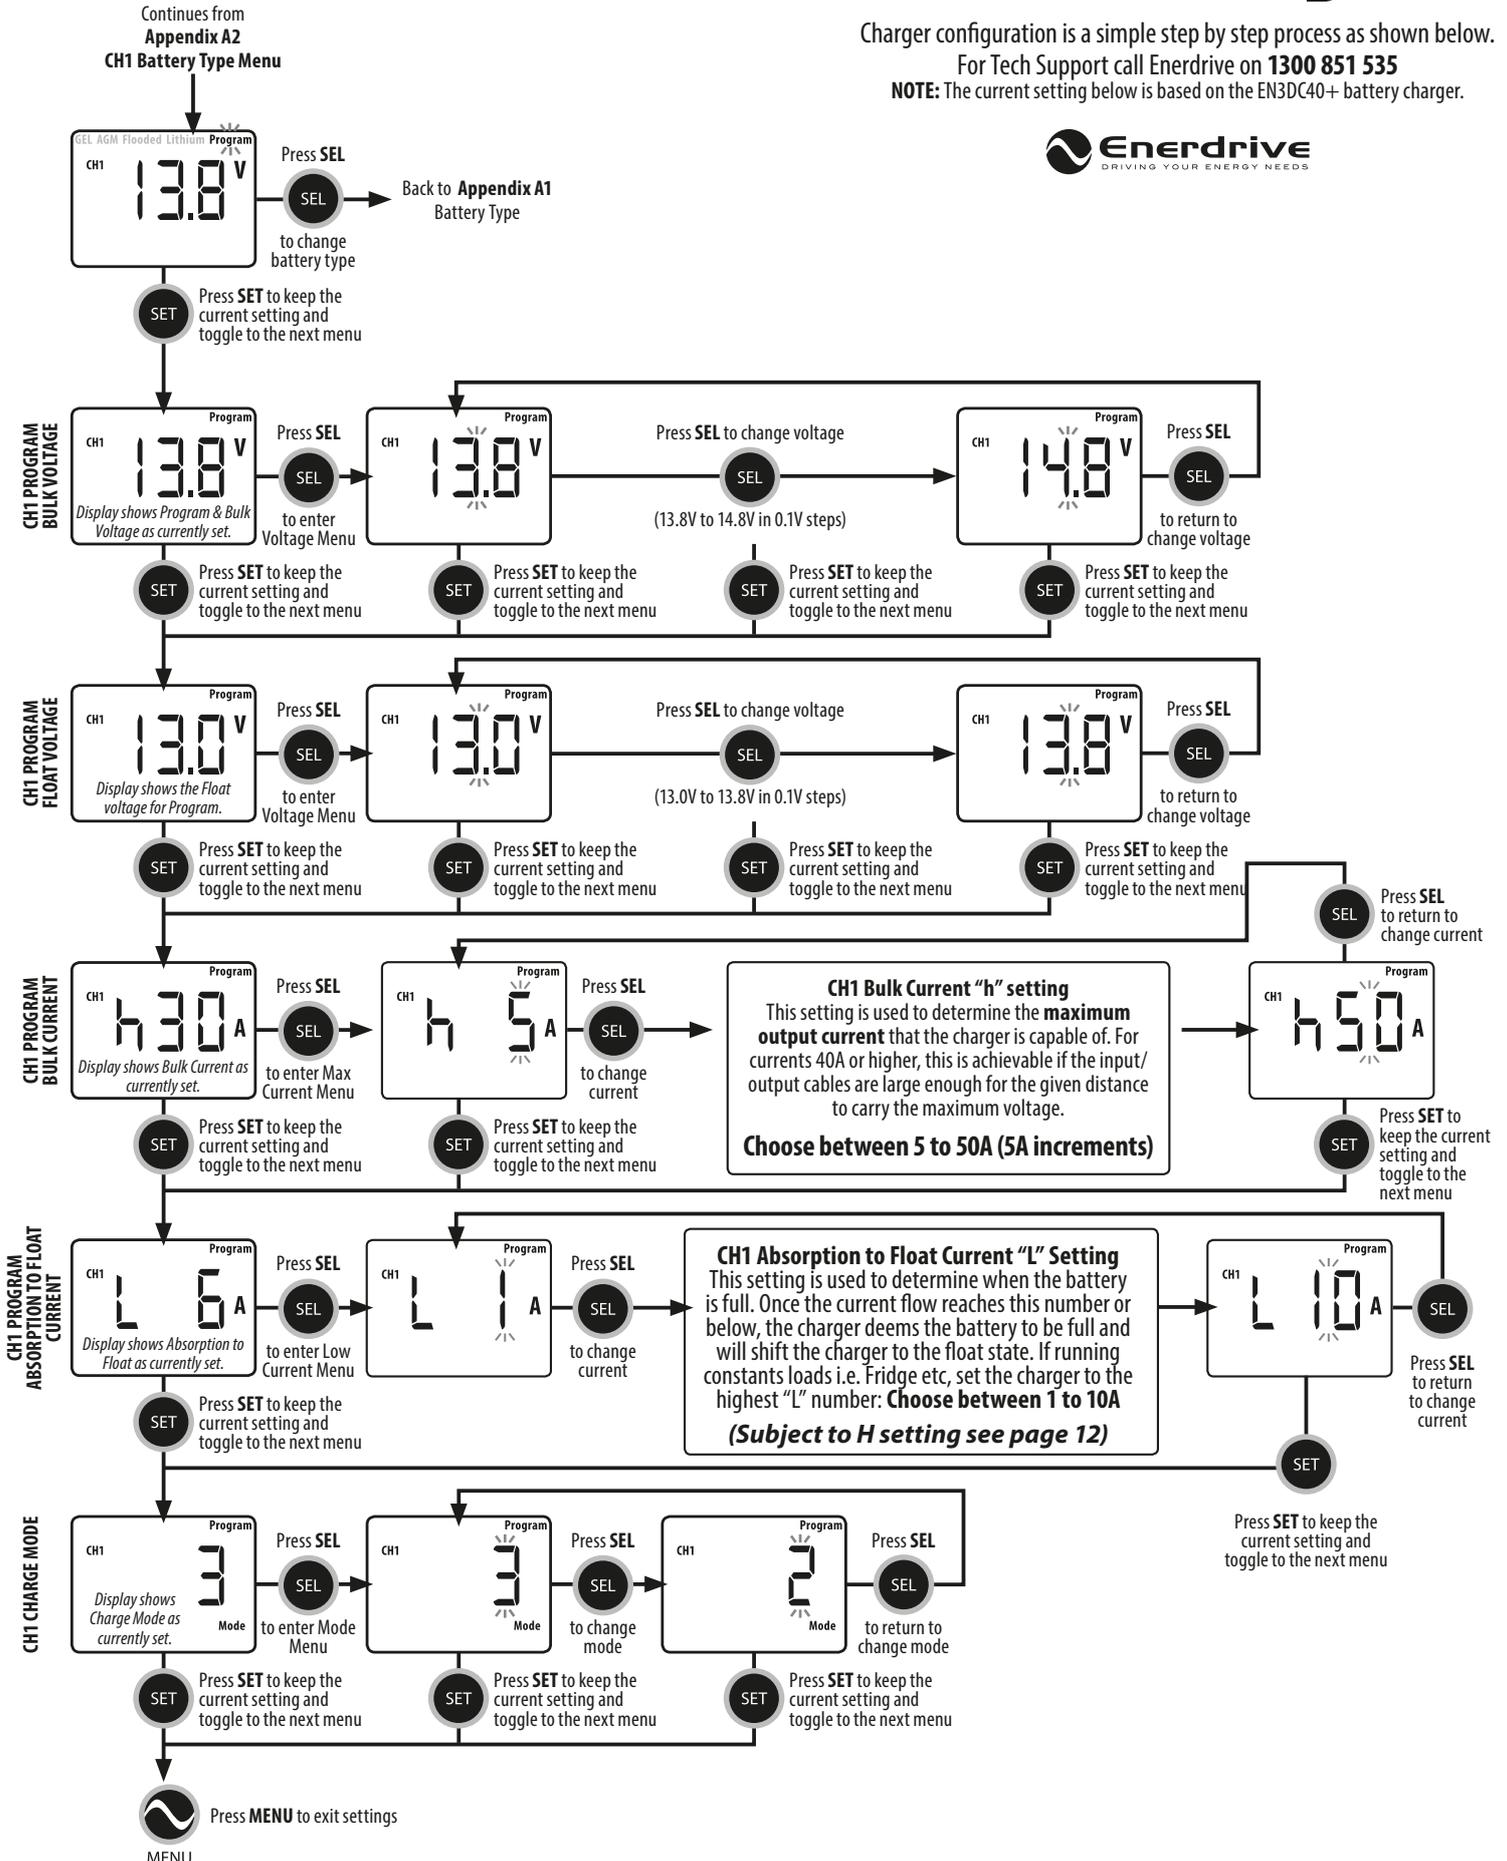

**NOTE:** At any function setting, pressing the MENU button will exit the function mode.

## WARNING: FIRE HAZARD

When using the Program Mode to set the battery charging parameters, please consult the battery manufacturer on all the voltage and current settings. Using the wrong setting to charge battery may overcharge, damage the battery and may cause a fire.