


# TECH TIP - CONFIGURING YOUR MANAGER

## 1 Configure Charger



From the **Main Menu**:

- Tap the *Charger* Button

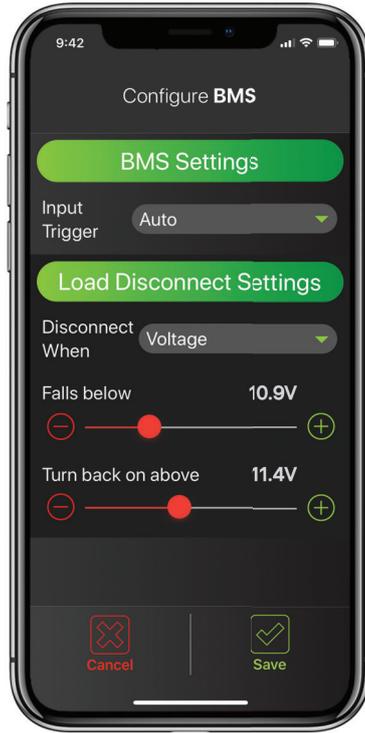

The Configure BMS (Charger) page allows you to setup the Input Trigger and Disconnect When settings for a Manager15 or Manager30 should one be connected.

- The default Input trigger setting is '*Automatic*'.
- The default Disconnect When setting is '*Always*'.

Refer to The MANAGER instruction manual for more detail on these features.


Tap *SAVE* to confirm settings.

## 2 Configure Battery Sensor



From the **Main Menu**:

- Tap the *Battery Sensor* Button

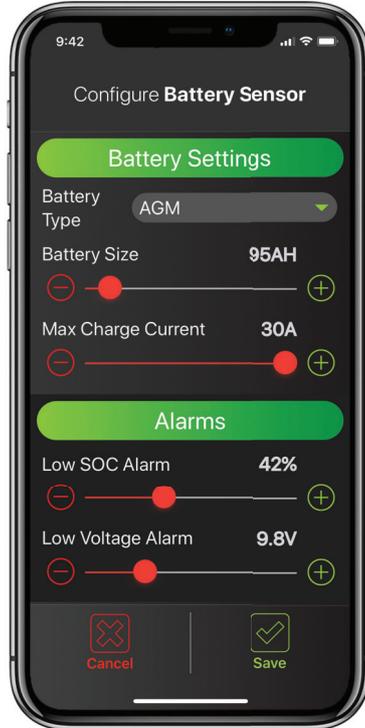

The Configure Battery Sensor page allows you to set the Battery Type, Size and Maximum Charge Current along with SoC & Voltage alarm levels.

- The default battery type is '*Gel*'.
- The default battery size is '*40AH*'.
- The default Maximum Charge Current is the maximum output of your Manager (15A/30A).
- The default SOC Alarm is '*10%*'.
- The default Voltage Alarm is '*10.5V*'.

For more information on these settings refer to The MANAGER instruction manual.

Tap *SAVE* to confirm settings.