



12

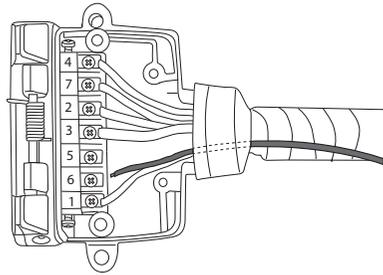

At the Trailer Socket, remove the existing RED wire at terminal #6 and pull outside the wiring harness.

13

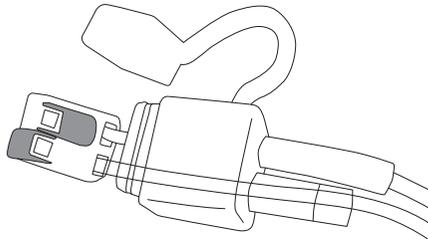


Feed this removed RED wire into the supplied joiner in the rubber boot at the end of the twin-core cable.

It is necessary to push the joiner out using the fitted ORANGE wire - then open the spring clip and feed the RED wire before closing.

Ensure the boot cover is fitted to seal (apply tape or cable-tie)

14

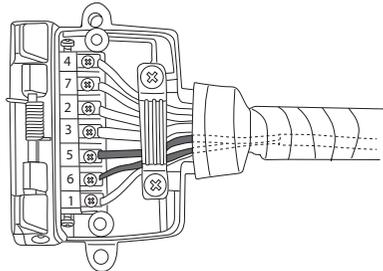

Feed both the exposed RED and BLUE wires (at the end of the main cable) into the Trailer Socket.

Connect the RED to Terminal #6

Connect the BLUE wire to Terminal #5

Note - if there is a BLUE wire already fitted to Terminal #5, pull this back outside the connector and tape back (ensuring it is insulated and sealed)

15




Re-fit all trim and secure all wiring (ensuring it is clear of all sharp edges and moving parts).

Connect the Fused supply (BLACK wire) to the Positive terminal of the Vehicle Start Battery, and check operation.


This kit is suitable for vehicles where the Start Battery is on the other side of the vehicle from the rest of the installation.

Image right shows battery on passenger side - also suits mirror-image (battery on Drivers side: main installation on Passenger side).

Tow-Pro kit (including Main Unit; Remote Head; Remote Head cable) sold separately.

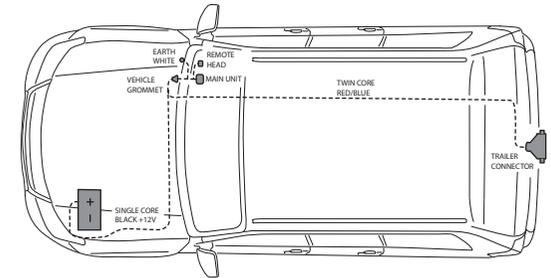


01

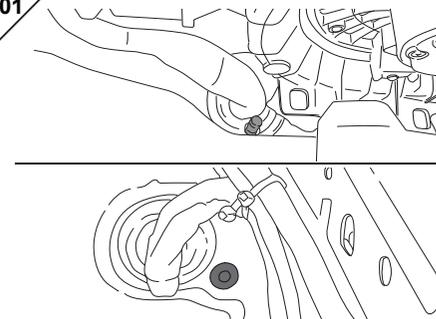

Before commencing installation, confirm cabin entry for:
Fused positive supply forwards (single-core BLACK)
Trailer socket connection rearwards (twin-core RED/BLUE)

The kit contains a variety of grommets which may suit unused locations on vehicle. If existing vehicle grommets have provision for additional wiring, these also may be used.

02

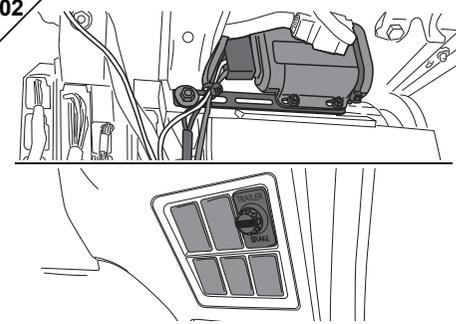


Confirm location for:
- Main Unit (ensuring supplied bracket has secure fixing)
- Remote Head

NOTE - Ensure the parts fitted (including wiring) do not foul on any moving parts (glove box; pedals; cables, etc). Ensure the area behind the Remote Head has sufficient clearance.

Check the REDARC website for Switch Inserts if your vehicle has any unused standard switch locations.

If the Remote Head is mounted far from the Main Unit, longer Remote Head cables are available from REDARC.

03

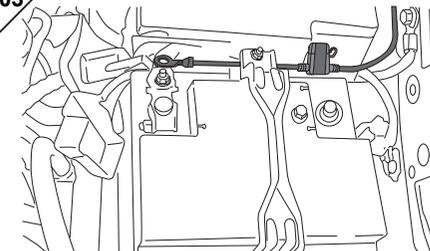

Run the BLACK fused Positive supply wire from the Vehicle Start Battery positive terminal through the cabin entry point to the Main Unit location.

NOTE - DO NOT CONNECT THE RING TERMINAL TO THE BATTERY AT THIS STAGE. ONLY CONNECT TO POWER AT THE END OF INSTALLATION.

