

L-700-RX, L-1800, L-VRSG-2, L-VRSG-3 or AFDL

Louvers: Fit 1-3/4" Thick Doors

Installation Instructions


1. Cut out door in accordance with door manufacturers procedure.
2. Position outer frame with louver core, in door cut out.
3. Position inner frame and insert and start all screws before fully tightening.
4. Tighten screws using crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.

FIELD PAINTING: FOR BEST RESULTS SCUFF FINISH WITH A SCOTCH-BRITE PAD OR SAND PAPER BEFORE PAINTING.

Instrucciones de instalación

1. Recorte la abertura en la puerta siguiendo el procedimiento recomendado por el fabricante de la puerta.
2. Coloque el marco exterior con la rejilla en la abertura de la puerta.
3. Coloque el marco interior e inserte y empiece a enroscar todos los tornillos antes de apretarlos completamente.
4. Apriete los tornillos usando un patrón entrecruzado. Tenga cuidado cuando use atornilladores eléctricos para evitar dañar el material.

PINTURA EN EL ÁREA DE INSTALACIÓN: PARA OBTENER MEJORES RESULTADOS ANTES DE PINTAR LIJE CON UNA ALMOHADILLA SCOTCH-BRITE O CON PAPEL LIJA.

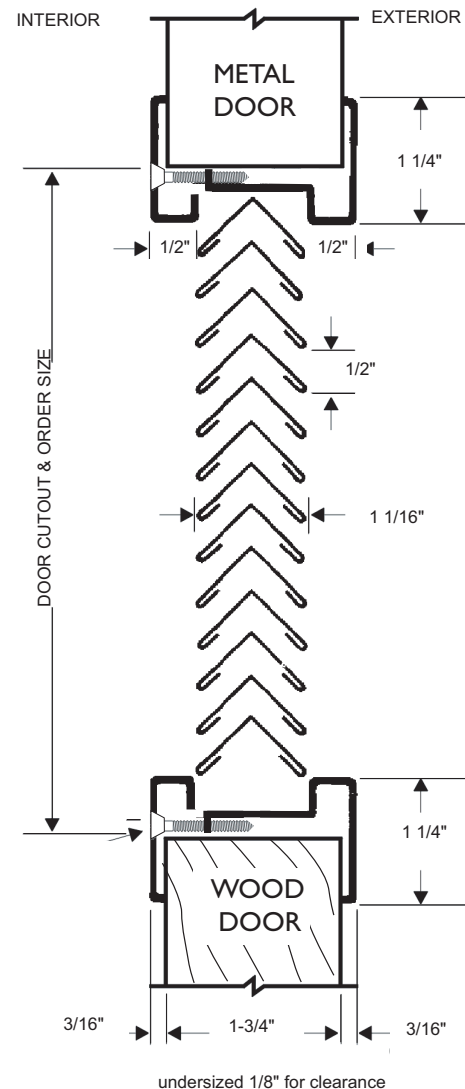

L-700-RX & L-1800 undersized 1/8" for clearance
L-VRSG-2 & L-VRSG-3 undersized 1/16" for clearance.